



Step 1: Apply Hi-Flex EPDM membrane to deck & parapet.

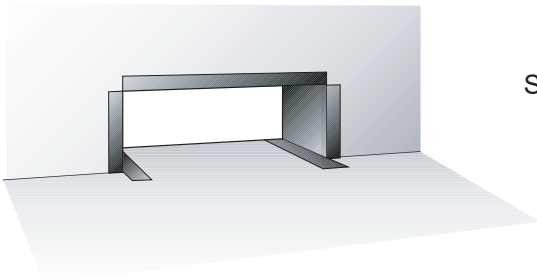

Step 2: Bond EPDM piece to inside of scupper. Tie into membrane with seam.

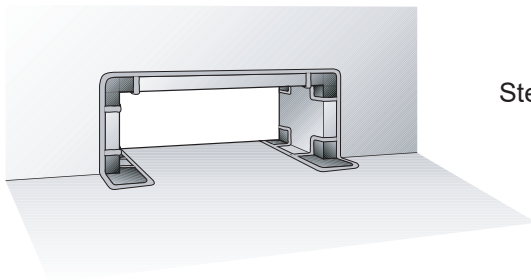

Step 3: Apply Hi-Flex EPDM LexFlash II to corners & caulk all expose edges with Hi-Flex EPDM Lap Sealant.



**Through-Wall Scupper
Roofing System Detail**

Scale: Not to scale
Date: August, 2016
Detail No.: L-S-317